NCG® TOOLS

PIECES DETACHEES
SPARE PARTS
ERSATZTEILE
ONDERDELENLIJST

PIEZAS DE RECAMBIOS
PEZZI DI RICAMBIO
スペアパーツ

ENTRETIEN
MAINTENANCE
WARTUNG
ONDERHOUD

MANTENIMIENTO
MANUTENZIONE
メンテナンス

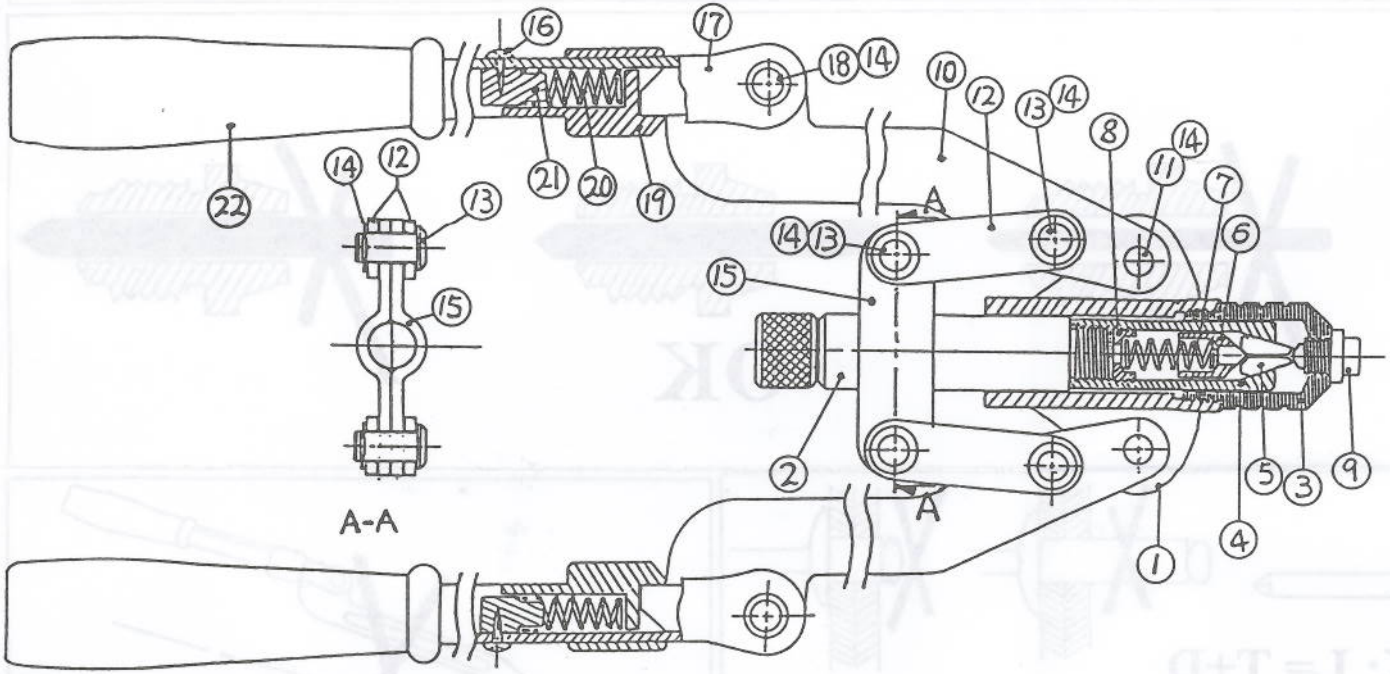

H1	Part No. & Name
1	H1-01 Body Frame
2	H1-02 Draw Bar Lead
3	H1-03 Sleeve Seat
4	H1-04 Jaw Case
5	H1-04-1 Jaws
6	H1-04-2 Jaw Pusher
7	H1-04-3 Press Spring
8	H1-04-4 Spring Screw
9	H1-05 Nose Piece
10	H1-06 Lever
11	H1-07 Body Pin
12	H1-08 Connecting Bar

H1	Part No. & Name
13	H1-09 Bar Pin
14	H1-10 E-6 Ring
15	H1-11 Balancing Bar
16	H1-12 Screw
17	H1-13 Handle
18	H1-14 Handle Pin
19	H1-15 Handle Lock
20	H1-16 Handle Lock Spring
21	H1-17 Lock Spring Stopper
22	H1-18 Plastic Grip
23	H1-19 Spanner 17 and 12
24	H1-20 Spanner 19 and 15

H2	Part No. & Name
25	H2-03 Sleeve Seat
26	H2-04 Draw Bar
27	H2-05 Screw of Mouth Part
28	H2-05-1 Nut of Mouth Part
29	H2-21 Spanner 8.5 and 5.5

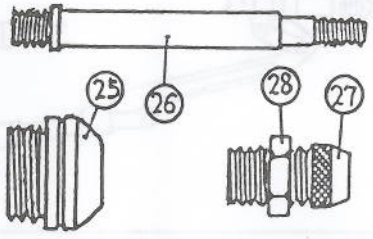

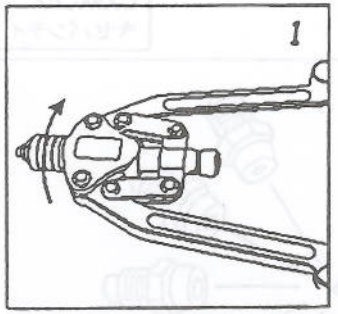

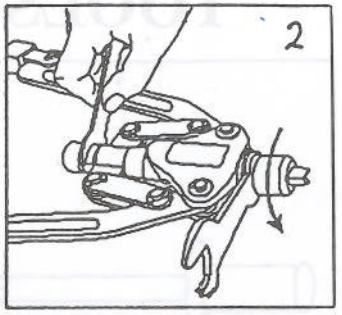

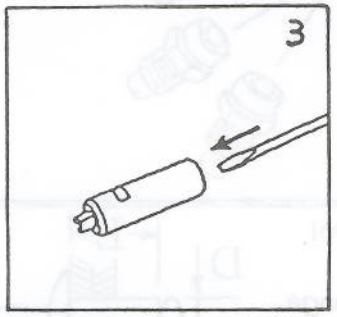

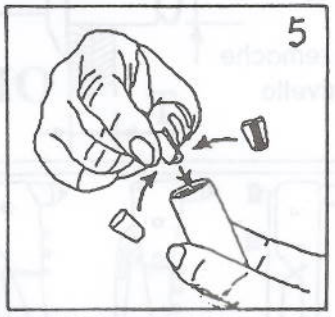

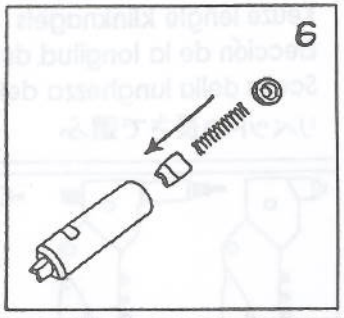

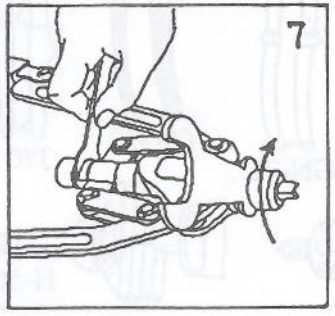

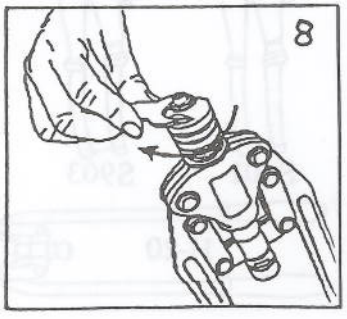

NCG®
TOOLS

UTILISATION
GEBRUIK
USE
UTILIZACION
EINSATZ
UTILIZZO
使用

CAPACITE
CAPACITY
SCHNEIDBEREICH
CAPACITEIT
CAPACIDAD
CAPACITA
キセパンテイ

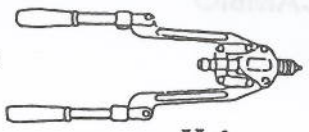

H-1

ALU
ALU
ALU
ALU
ALUMINIO
ALLU
アルミニーム

→ 6.4mm (1/4")

ACIER
STEEL
STAHL
STAAL
ACERO
ACCIAIO
スチール

→ 6.4mm (1/4")

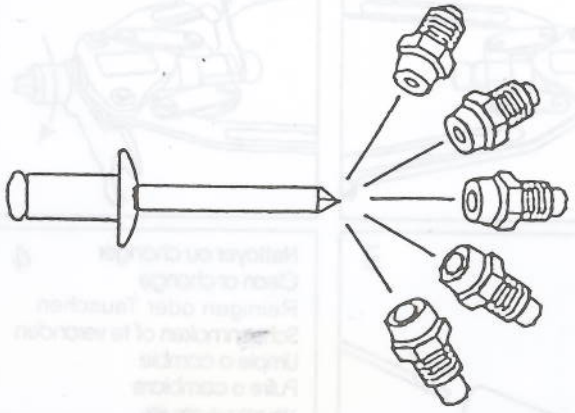

OK

Choix de la longueur du rivet
Choice of rivet length
Auswahl der Blindnietenlaenge
Keuze lengte klinknagels
Elección de la longitud del remache
Scelta della lunghezza del rivetto
リベットの長さで選ふ

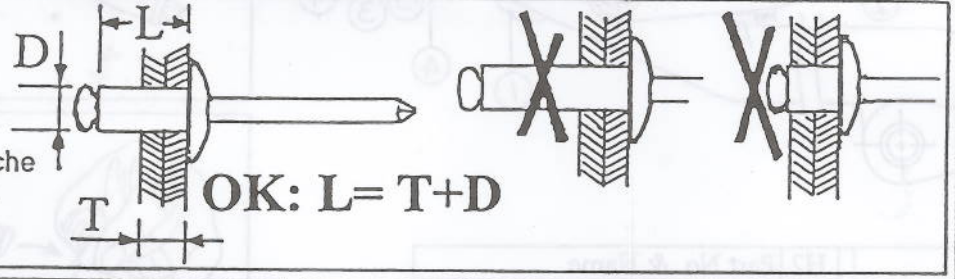

OK: L= T+D

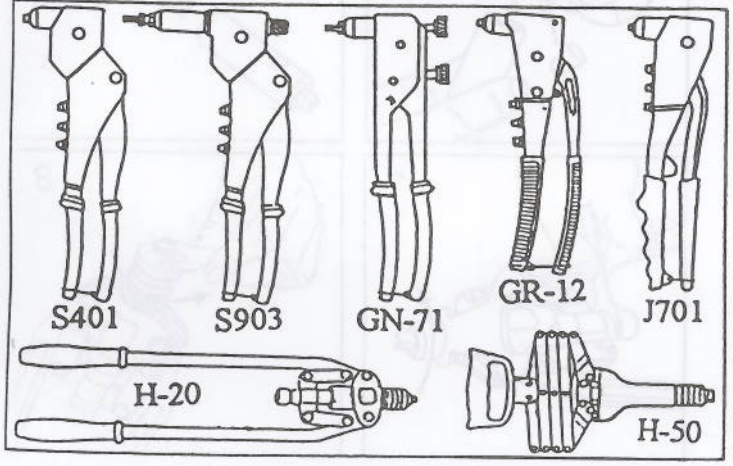

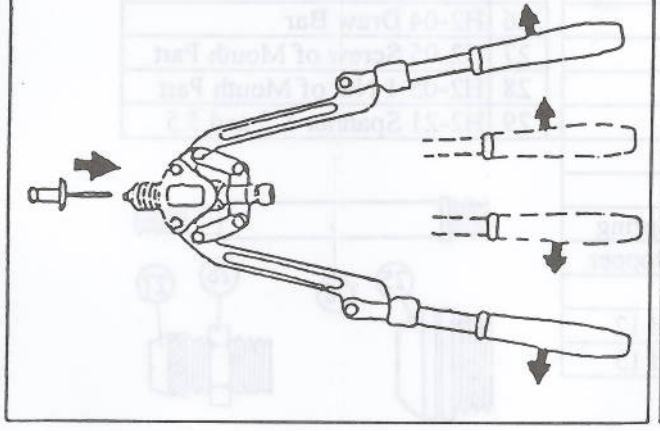

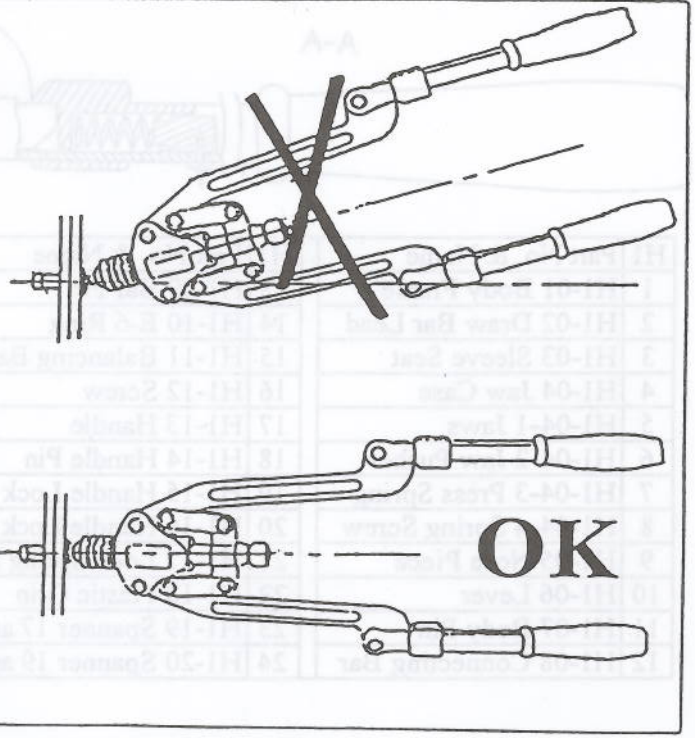

OK

TOOLS

Using rivets:

1.Close the handles.

2.Please set measurement nut (A) to connecting bar (B) as close as possible. To set measurement nut (A), hold the measurement nut (A) with one hand and screw the drawbar head (C).

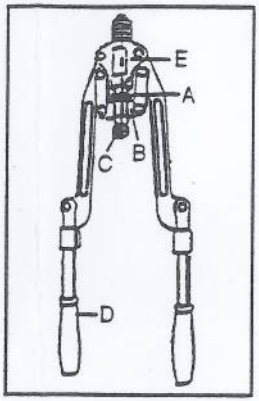

Using nuts or blind nuts:

1.Close the handles (D).

2.Adjust measurement nut (A) to the desired length.

3.Open the handles until the measurement nut (A) touches the riveter body (E).
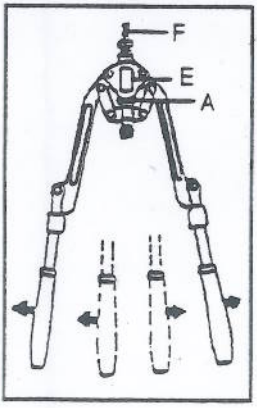
4.Screw on the nut that is to be used into the drawbar (F) until the drawbar protrude a little bit out of the nut.